


STORAGE/GARAGE WALL-MOUNT INSTALLATION

#1000R RHINO 3-Shelf Bracket System with Removable Hook and Wall-Mount Bracket




The #1000R Rhino 3 Shelf System is also mountable on a wall.

(8) Lag Bolts, (4) Stabilizer Wall Mount Brackets,
(2) Insta Rhino 3-Shelf Brackets required to complete installation.

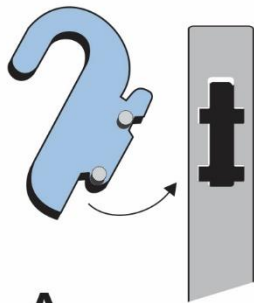


A
Remove Hook
Slide hook out of the slot at the top of the Rhino support bracket.

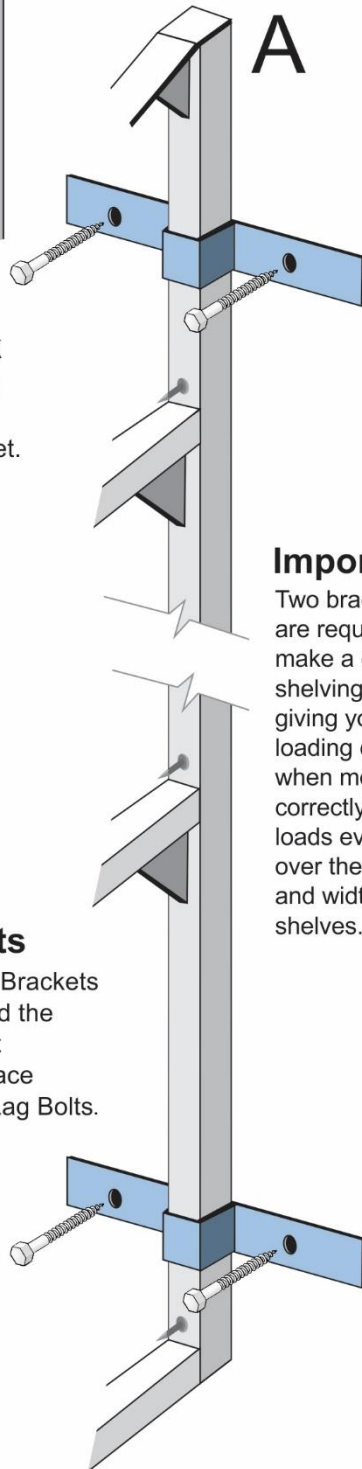

B
Install Wall Mount Brackets
Slide the Wall Mount Brackets in place at the top and the bottom of the support bracket. Secure in place on wall using 2 1/2" Lag Bolts.

Important

Be sure to screw the Rhino shelf bracket unit into a secure backing.

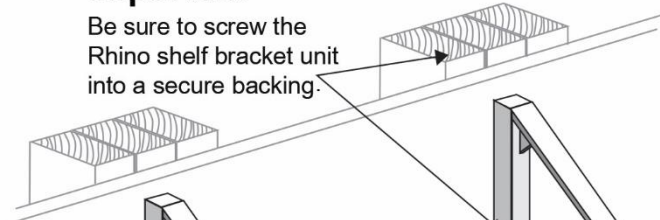

B

Important

Two bracket units are required to make a complete shelving system giving you 2200lbs. loading capacity when mounted correctly. Apply loads evenly over the length and width of the shelves.

B

